

Others may also ask, "Can't I just plug in to the network connection already installed on my computer?"

The answer is no. The network connection on your computer uses the Ethernet protocol, while the LOR network is going to use the RS485. These two types of networks are not compatible with each other. Trying to connect the two may result in damage to one or both pieces of connected equipment.