

To stop Light-O-Rama, right click on the Light-O-Rama icon in the system tray and select Unload Light-O-Rama. Light-O-Rama will stop and the icon will disappear from the system tray. Unloading the Light-O-Rama Control Panel will also prevent scheduled shows from running.