

Symptom: The status LED being on most of the time, with short blinks off.

Resolution: This indicates that the firmware is not installed, or not installed correctly. Download the firmware from the [Light-O-Rama Support](#) page and apply it to the director.