

Check the status of the "Stand-Alone Speed Control" dial near the phone jack.

It should be centered, and not turned to the left or the right. This is the dial that controls the speed of your stand-alone sequences. It has no effect of sequences that are controlled via the computer.