

Check the version of the Hardware Utility that you are using. Make sure that you are using the most recent version of the Hardware Utility.