

When the sequencer is playing and reaches the end of the song, it sometimes will not stop, but will be stuck in Play mode until the [STOP] button is pressed. This happens when the sequence length is longer than the audio length. Workaround: For most instances, go into [Edit] then [Change Total Time]. Reduce the length of the song by .5 or even .01 seconds.